



Installation Instructions

Straight Run



1. Work from left to right as viewed from the ground. Place Gutter-Lock Diamond™ panel completely flat over existing gutters with the front edge of the panel lined up with the top front edge of the gutter and the back edge against the fascia board or drip edge.



2. Use the pre-existing screw holes along the front and back edge of Gutter-Lock Diamond™ to attach the panels to the gutter and fascia board. Three screws are recommended per panel for the front and back edge. (6 total per panel).



3. Place the next panel onto the gutter, overlapping the screw tab onto the panel to the left as shown. Attach the panel using Zip-Screws.

Inside Miter




1. Slide the Diamond panel against the inside of the gutter. Trim off the screw tab as marked. Attach the panel using Zip-Screws.




2. Slide the right panel so the screw tab overlaps the left side panel. Attach using Zip-Screws. A diverter may be needed depending on water flow volume.

Outside Miter

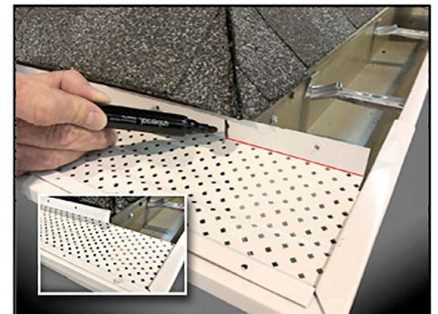

1. Place the left panel against the right edge of the gutter. Mark and trim the screw rail as shown. Attach using Zip-Screws

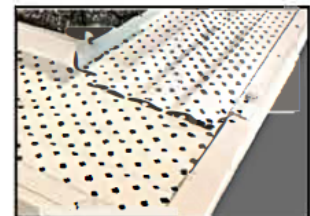

2. Place the right panel on the gutter, overlapping the screw tab onto the left panel. Attach using Zip-Screws.

